

Worksheet: CSTR to measure reaction kinetics


Name(s) _____

In this experiment, two liquid reactants in a solvent flow into a steady-state, continuous stirred tank reactor (CSTR). The objective is to determine the rate constant and the reaction order with respect to one of the reactants.

Student learning objectives

1. Be able to apply mass balances to a chemical reactor.
2. Be able to explain how changing the flow rate to a CSTR changes the rate of reaction and the conversion.

Experimental Diagram (replace with diagram with pumps, etc.)

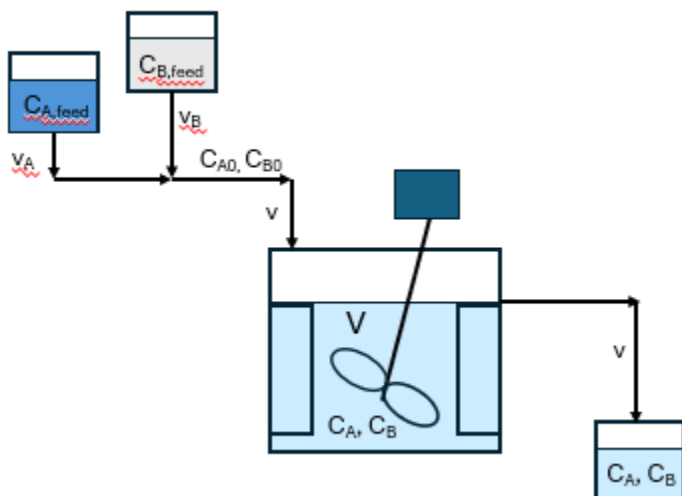

Assumptions

The reactor is well mixed, so the concentrations of reactants and products in the reactor are identical to those concentrations leaving the reactor.

Because the reactor is well mixed, the temperature is the same everywhere in the reactor.

The density of the liquid feed is the same as the effluent from the reactor.

Questions to answer before beginning the experiment

If the volumetric flow rate to an isothermal CSTR increases, does the reactant concentration in the reactor increase or decrease for a first-order reaction? Why?

If the volumetric flow rate increases, is more or less product produced per hour? Explain.

Start the experiment

The reactor starts filled with solvent (water).

Turn on motor to start the stirrer.

Select concentrations of the two feed tanks (use concentrations less than 0.50 mol/L) and record in the Table below.

Select a valve opening for the NaOH feed. Turn on the pump to start NaOH flow into the reactor.

Select a valve opening for the methyl acetate solution feed. Turn on the pump to start methyl acetate flow into the reactor. Note that the reactor residence time, which is V/v , where V is the reactor volume (2 L), and v is the total volumetric flow rate, should be greater than 15 seconds to ensure good mixing.

Allow time for the system to reach steady state. Typically, the time to reach steady state is about four times the reactor residence time. The simulation accelerates time so it will take less time to reach steady state in the simulation.

Use the stopwatch on your phone to measure the volume change of each feed tank and record in the Table. Calculate the two volumetric flow rates and record in the table. Calculate the feed concentrations (C_{A0} , C_{B0}) of the two reactants:

$$C_{A0} = \frac{v_A C_{A,feed}}{v_A C_{A,feed} + v_B C_{B,feed}}$$

$$C_{B0} = \frac{v_B C_{B,feed}}{v_A C_{A,feed} + v_B C_{B,feed}}$$

where

v_A = volumetric feed rate from the tank containing reactant A

v_B = volumetric feed rate from the tank containing reactant B

$C_{A,feed}$ = concentration of reactant A in the feed tank

$C_{B,feed}$ = concentration of reactant B in the feed tank

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					

Add the two flow rates together to obtain the total volumetric flow rate and record below.

v = _____

Move the mouse over the reactor or the effluent to measure the reactant concentrations and record in the Table and calculate conversion of NaOH. Conversion of A (X_A) for a constant-density system is:

$$X_A = \frac{C_{A0} - C_A}{C_{A0}}$$

Reactant	Concentration in reactor (mol/L)	Conversion of NaOH
NaOH		
CH ₃ COOCH ₃		

The density of the fluid does not change so the volumetric flow rate should be the same at the inlet and the outlet. Measure the outlet volumetric flow rate and record.

Volume change (L)	Elapsed time (s)	Outlet volumetric flow rate (L/s)

Compare the inlet and outlet volumetric flow rates.

Repeat these measurements by changing reactant concentrations in the tanks and/or their flow rates and use these measurements to determine the order of the reaction with respect to CH₃COOCH₃ if assume the reaction is first order in NaOH.

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					
Reactant	Concentration in reactor (mol/L)	Conversion of NaOH			
NaOH					
CH ₃ COOCH ₃					

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					
Reactant	Concentration in reactor (mol/L)	Conversion of NaOH			
NaOH					
CH ₃ COOCH ₃					

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					

Reactant	Concentration in reactor (mol/L)	Conversion of NaOH
NaOH		
CH ₃ COOCH ₃		

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					
Reactant	Concentration in reactor (mol/L)	Conversion of NaOH			
NaOH					
CH ₃ COOCH ₃					

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					
Reactant	Concentration in reactor (mol/L)	Conversion of NaOH			
NaOH					
CH ₃ COOCH ₃					

Flow stream	Tank Concentration (mol/L)	Volume change (L)	Elapsed time (s)	Volumetric flow rate from tank (L/s)	Feed concentrations (mol/L)
NaOH					
CH ₃ COOCH ₃					
Reactant	Concentration in reactor (mol/L)	Conversion of NaOH			
NaOH					
CH ₃ COOCH ₃					

Data Analysis

Use the data to obtain the rate constant at each condition using one of these mass balances.

A mass balance on a CSTR for reactant A for a first-order reaction is:

$$0 = v * C_{A0} - v * C_A - k_1 * C_A V$$

A mass balance on a CSTR for reactant A for a second-order reaction is:

$$0 = v * C_{A0} - v * C_A - k_2 * C_A C_B V$$

where

v = volumetric flow rate (L/s)

C_{A0} = concentration of reactant A (NaOH) in the feed stream (mol/L)

C_{B0} = concentration of reactant B ($\text{CH}_3\text{COOCH}_3$) in the feed stream (mol/L)

C_A = concentration of reactant A in the reactor (mol/L)

C_B = concentration of reactant B in the reactor (mol/L)

k_1 = first-order rate constant (s^{-1})

k_2 = second-order rate constant ($\text{L mol}^{-1}\text{s}^{-1}$)

V = reactor volume (L)

Since the reaction is $A + B \rightarrow \text{products}$, stoichiometry requires that the amount of A that reacts must equal the amount of B that reacts: $C_{A0} - C_A = C_{B0} - C_B$

Thus, the mass balance in terms of C_A for a second-order reaction is:

$$0 = v * C_{A0} - v * C_A - k * C_A(C_{B0} - C_{A0} + C_A)V$$

Experiment	Rate constant
1	
2	
3	
4	
5	
6	
7	
8	
Average	

Plot conversion of reactant A versus residence time (V/v) for the same feed concentrations.

Questions to answer

1. If this experiment were conducted in the laboratory, what might cause the conversion in the reactor to differ from that expected based on the known value of the rate constant?
2. What safety measures would you employ if making this measurement in the laboratory?